

# Quick guide

## Infrared remote control

Adjusting the remote control number



In this quick guide you will learn how to program the EHP infrared remote control to operate your crane scale.



### 1. Press the **TEST** button on your crane scale

The most important setting parameters are displayed one after the other:

88888 = Segment test

LAH = Release name

12.21 = Release version


xx = Scale number (01-16)

Cxx = Canal number (01-28)

**Hxx = Remote control number (01-12)**

Memorize the remote control number. You will need to program this number into the infrared remote control.

### 2. Press the key combination on your infrared remote control in quick succession:

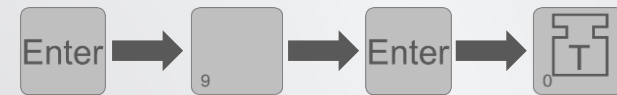

The LED above the Shift button will light up for 5 seconds. Within this time you can assign a new remote control number by typing the following key combination: 2xx

xx = required remote control number (01-12 possible)

**Example:** To set the remote control number H01, enter the following key combination:



### Automatic channel scan:

Alternatively, the remote control can be set to scan. Point the remote control at the scale you wish to control. Press the key combination: Enter/9/Enter/0/Enter. The search run is indicated by the upper LED flashing cyclically. As soon as the scale reacts to the search run, press the Enter button again. The storage process is confirmed by the flashing of the upper LED.